


Flow chart, TX25 or TX70 with Reverse valve = NORMAL OPERATION (source point to delivery point)

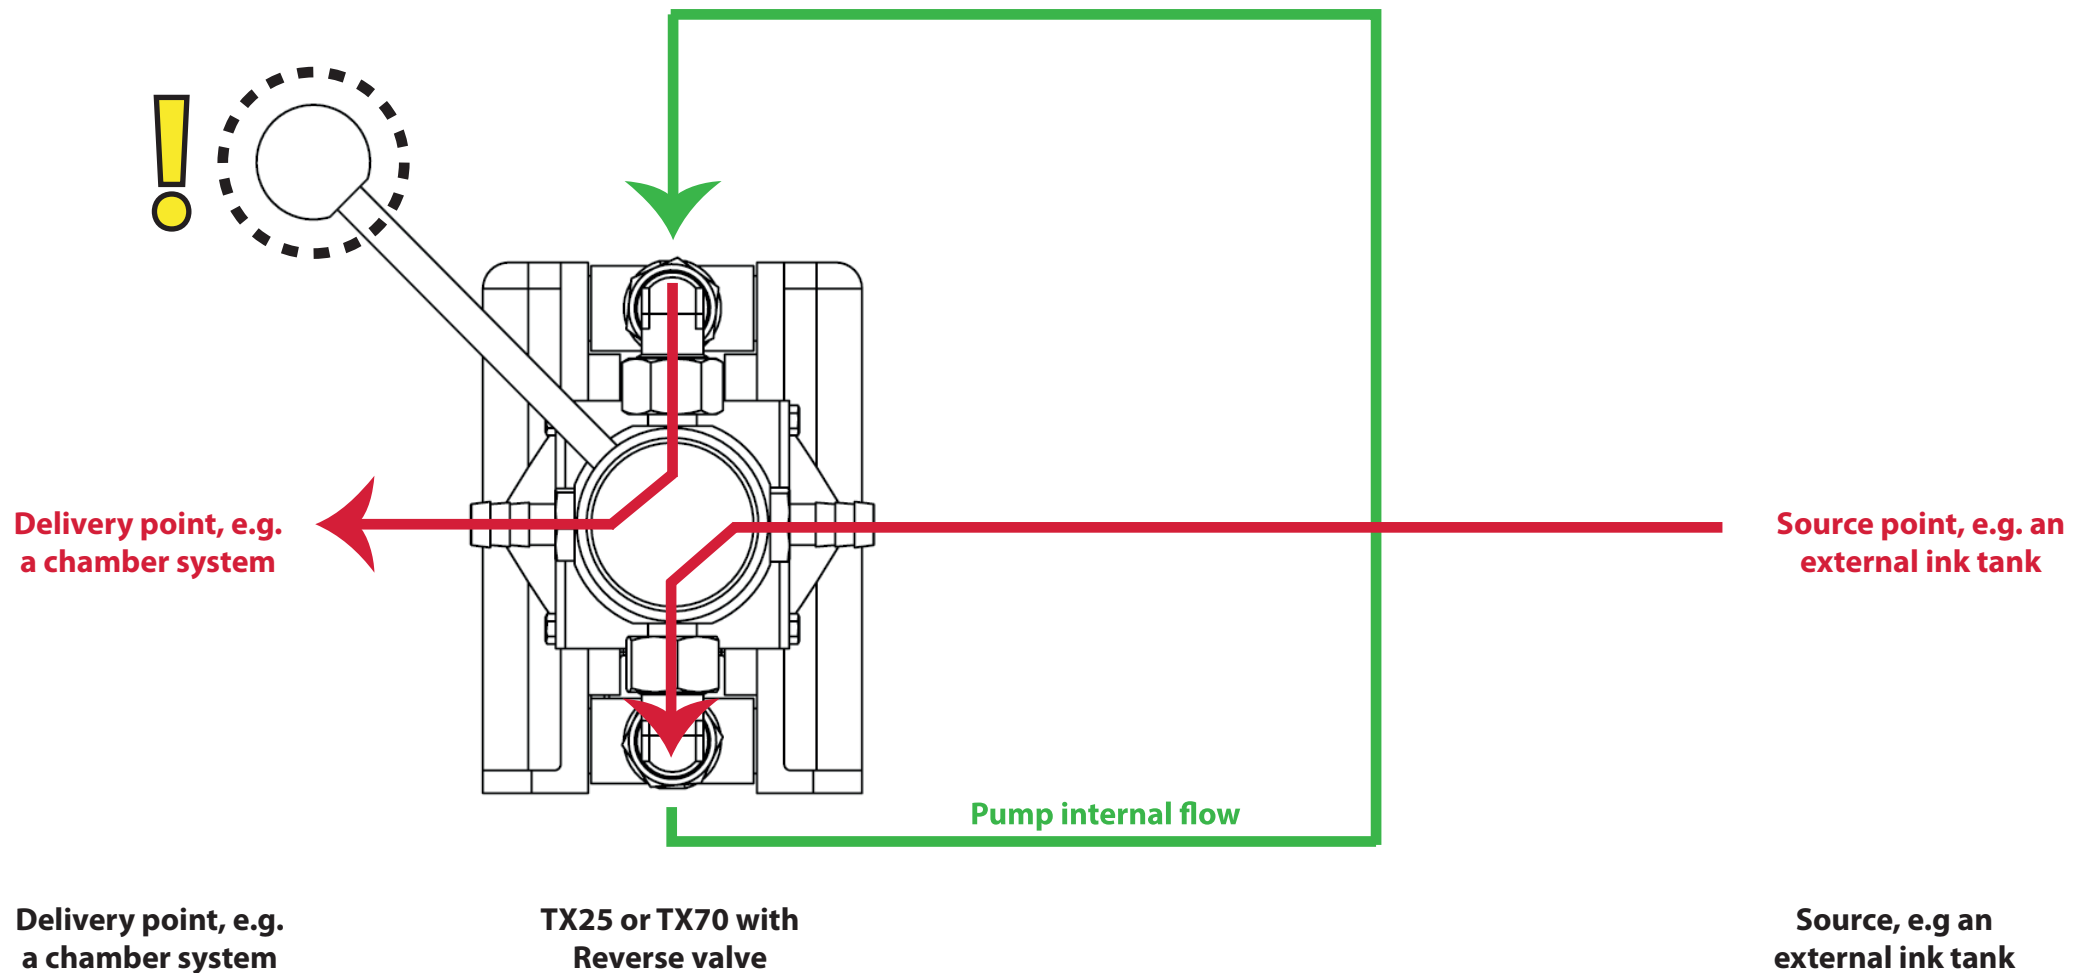

Flow chart, TX25 or TX70 with Reverse valve = REVERSED FLOW (delivery point to source point)

